


Breda

Design by BoConcept



Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

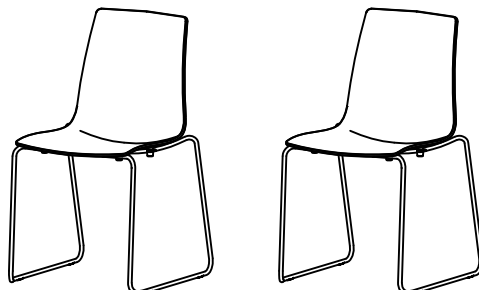

D020

83,8/45,9x49,4x50,7 cm

Korpus — Korpus — Carcasse — Carcasse
Breda 2010

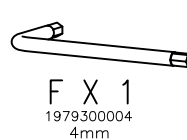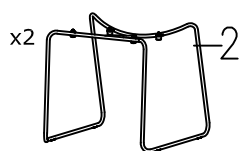

Breda 2000




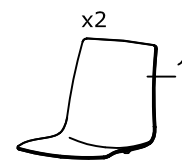



FIG.
1

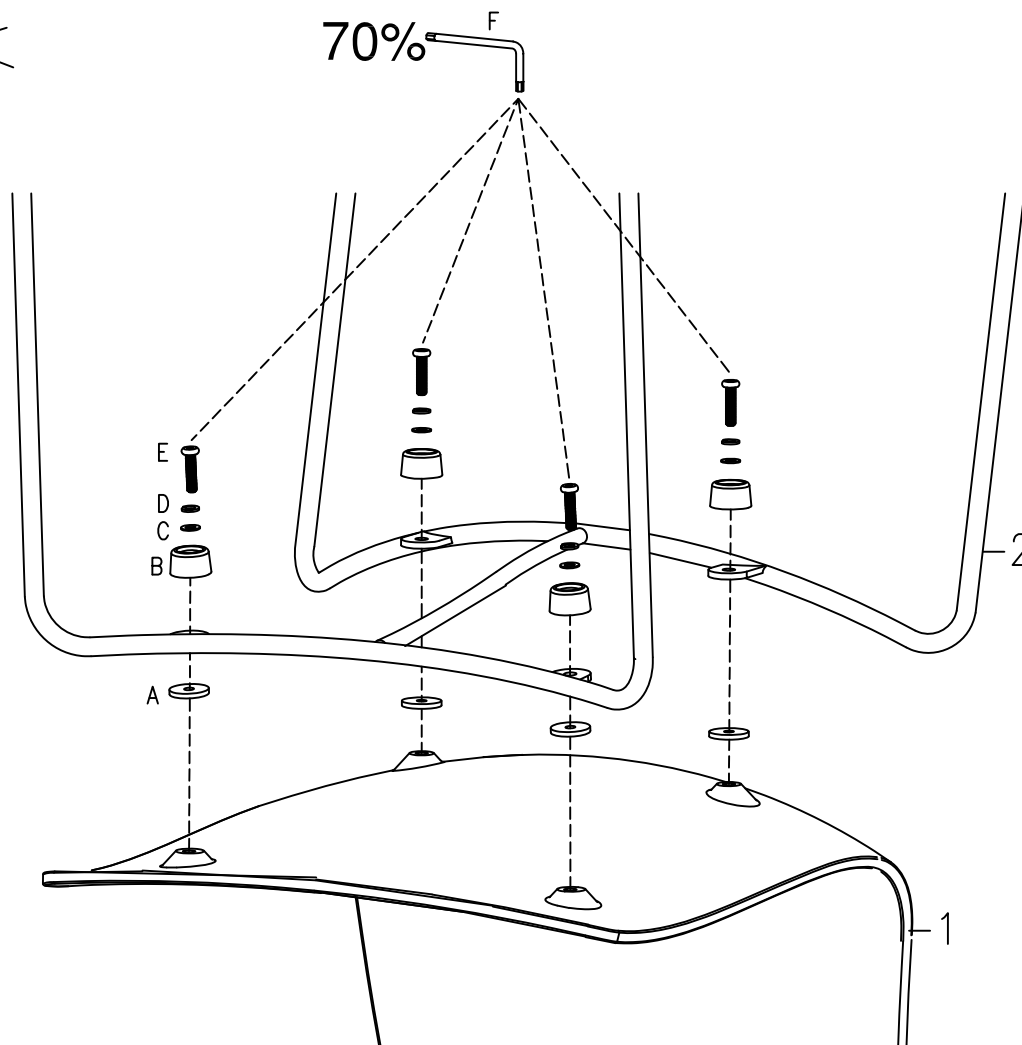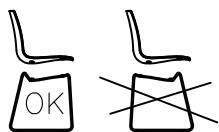

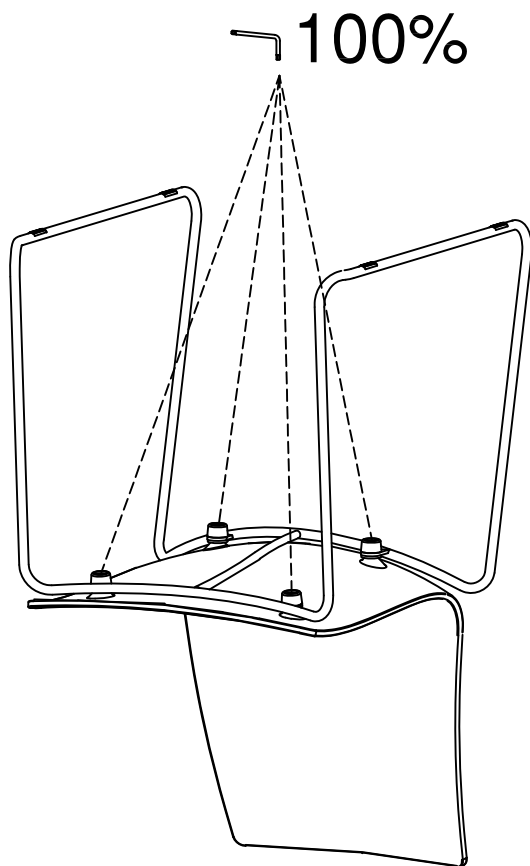

Efterspændes
Tighten screws fully after assembly
Nachziehen
Resserrer
Aanspannen
Reapretar
Serrare le viti dopo il montaggio
Reapertar
組立後、ネジをしっかりと締めてください。

Attention!
max. 55°

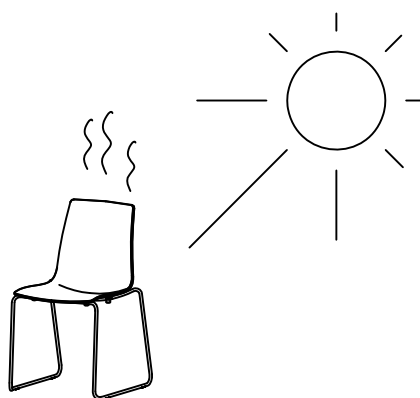

DK Ved reklamation oplyses følgende:
D Im Reklamationsfall, bitte folgendes erläutern:
US In case of claims, please state the following:
F En cas de réclamation, veuillez indiquer:
NL Bij service volgens mededelen
E En caso de reclamación, indicar lo siguiente:
P No caso de reclamação, por favor indique o seguinte:
JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

